



TABLE OF CONTENTS

PRECAUTIONS	1
IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT GENERAL DESCRIPTION.....	4
PACKAGE CONTENTS.....	5
ABOUT OPTICAL DISCS.....	6
Disc Requirements.....	6
Disc Care and Maintenance	6
Handling a Disc.....	6
Cleaning a Disc.....	6
LOCATION OF CONTROLS.....	7
Front View	8
Back View	8
Bottom View.....	8
Side View.....	8
CONNECTIONS	9
USB/SD Card Connection.....	9
Power Connection	9
Using The Built-in battery.....	10
Earphone Connection	10
BASIC OPERATIONS.....	11
Power Supply	11
Basic Playback.....	11
LCD Mode	11
Power Saving.....	11
Adjusting the Volume	12
Disc Error Messages	12
Power Management.....	12
IR Menu	12
SETUP	13
Language Setup.....	13
Video Setup	14
Audio Setup.....	14
Rating.....	14
Misc.....	14
SPECIFICATIONS	15
TROUBLESHOOTING.....	16
Westwell Warranty Statement	17

PRECAUTIONS

	CAUTION <i>RISK OF ELECTRIC SHOCK</i> <i>DO NOT OPEN</i>	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		

For Customer Use:

Enter below the serial number that is located on the bottom of the unit. Retain this information for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

Handling the cords on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.

CAUTION:

This Digital Video Disc player employs a laser system. To prevent direct exposure to the laser beam, do not try to open the enclosure or defeat the safety interlocks. When open and the interlocks are defeated, visible laser radiation is present. To prevent electric shock, match wide blade of plug to wide slot of outlet and fully insert.

Use of controls, adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure. **DO NOT STARE INTO THE BEAM.**

NOTICE:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works.



This player has built-in copyright protection technology that prevents copying from a DVD disc to any media.

If a video recorder is connected to the player, the video output image will be distorted during recording.



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance: www.eiae.org.

IMPORTANT SAFETY INSTRUCTIONS

1. **Read Instructions:** All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions:** The safety and operating instructions should be retained for future reference.
3. **Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
4. **Follow Instructions:** All operating and usage instructions should be followed.
5. **Cleaning:** Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
6. **Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
7. **Water and Moisture:** Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
8. **Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
9. **A product and cart combination should be moved with care.** Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. **Ventilation:** Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer instructions have been adhered to.
11. **Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
12. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the polarized plug.
13. **Power-Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point which they exit from the product.
14. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.



IMPORTANT SAFETY INSTRUCTIONS

15. **Lightning:** For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
16. **Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
17. **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
18. **Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
19. **Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
20. **Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
21. **Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to ensure that the product is in proper operating condition.
22. **Wall or Ceiling Mounting:** The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
23. **Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
24. If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.(Waste Electrical and Electronic Equipment Directive)



 
PRODUCT GENERAL DESCRIPTION

Product Main Features


- Swivel-screen Compact Portable Tablet Design
- 7inch (17.5cm) Widescreen (16:9) Colour TFT Display
- DVD,DVD±R/RW,CD,CD-R/RW,JPEG,WMA,AVI compatible
- Plays digital audio,video,and photo files directly from USB drive or SD card
- Multi-Language Subtitles/Multi-Viewing Angles Support
- Video/Audio Output for External Display Devices
- Stereo Earphone & Built-in Speakers
- Parental lock control & Last memory
- Anti-skip circuitry

PACKAGE CONTENTS


Please make sure the following items are included in the package. If any items are missing, please contact your local dealer.

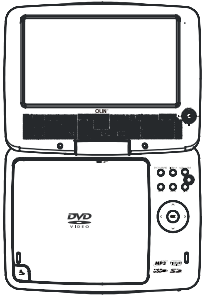

Main Unit

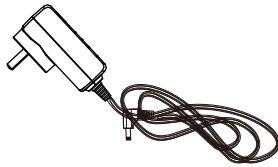 

AC Adapter

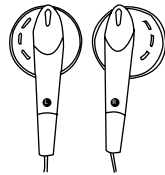 



Earphones

ABOUT OPTICAL DISCS

Disc Requirements


This DVD player supports playback of the following discs.

Type	Disc Mark	Content Type	Disc Size	Max. Playback Time
DVD-Video Discs		Audio + Video (moving picture)	12 cm	133 min (SS-SL)
				242 min (SS-DL)
				266 min (DS-SL)
				484 min (DS-DL)
Audio Compact Discs (CDs)		Audio	12 cm	74 min
JPEG CDs	--	Still Picture	12 cm	--

This unit can play back following discs: CD-R, CD-RW, DVD, DVD+R/RW, CD, CD-R/W, JPEG, MP3 .

Disc Care and Maintenance

 Optical discs (DVDs, CDs) contain high-density compressed data and need proper handling.



Handling a Disc

 
- Hold a DVD/CD by its edges. Avoid touching the recorded side of the disc. To remove a DVD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
- Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures.
- Do not bend or press discs.
- To reduce the risk of scratches, always put discs back in their case after use. Store discs vertically in a cabinet.
- Do not place stickers or labels on either side of a disc.

Cleaning a Disc

Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc. Wipe in a straight line radially from the center to the outside edge of the disc. Small dust particles and light stains will not affect playback quality.

- Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

LOCATION OF CONTROLS

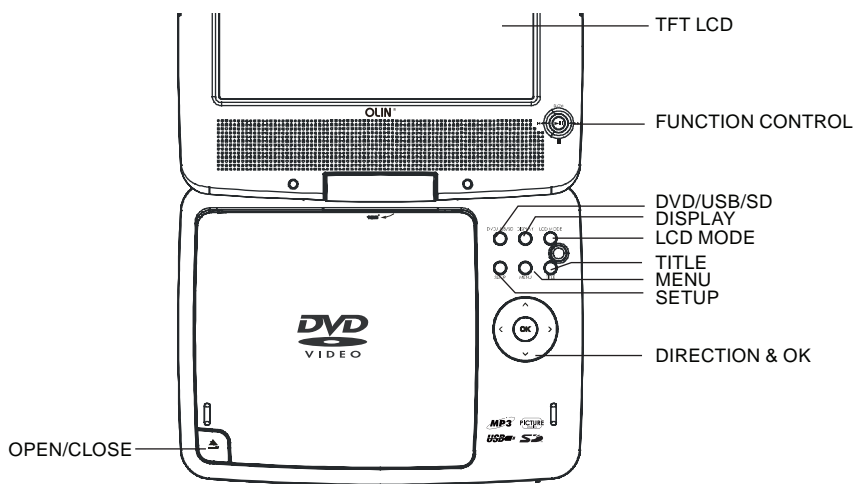

TFT LCD - Present high resolution images.

DVD/USB/SD - Press this button to display a source menu, use the up/down direction button to select an available mode, press Ok to access.

TITLE - Briefly press this button to display a title menu. Press and hold this button to display a IR menu, please read the "Basic Operation" section for details.

 
MENU - Press this button to locate a root menu.

SETUP - Press this button to display the system setup menu.

Direction & OK - This set of buttons is usually used when working with menu setup, use direction buttons to select and to adjust an option, press OK to confirm. You also can press OK to start disc playback.

OPEN/CLOSE - Open/close the disc room.


FUNCTION CONTROL -

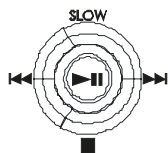


- Play/Pause - Press this function control to start/hold disc playback.
- Skip - Briefly push it to the left/right to locate a previous/next playback point.
- Search - Hold it to the left/right for a short while to search fast backward/forward through playback contents.
- Slow - Repeatedly push it up to start slow motion playback with a chosen speed. To resume a normal playback, press down this function control.
- Stop - Briefly push it down to stop disc playback. You may get a pre-stop mode for the first time you push it down, do it the second time to stop playback completely.

LOCATION OF CONTROLS

 
FRONT View

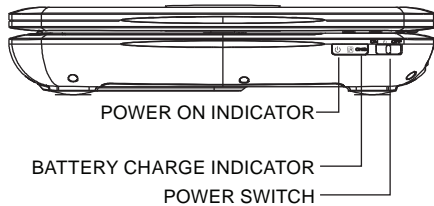


BACK View

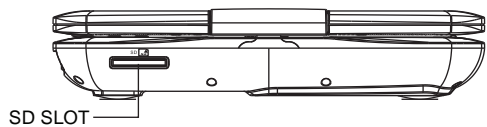 

BOTTOM View

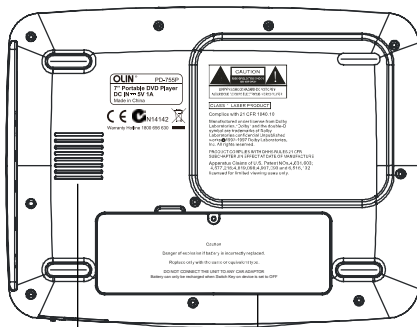 

SIDE View

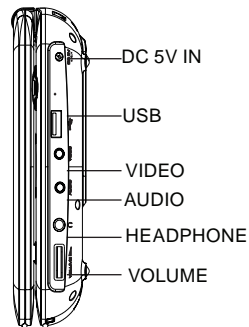 

VENTILATION SLOTS RECHARGEABLE BATTERY

FRONT View

POWER ON INDICATOR - Lights green during operation.

BATTERY CHARGE INDICATOR - Lights red during charge process and will turn green after the battery is fully charged.

POWER SWITCH - Turn the unit on/off.

BACK View

SD SLOT

BOTTOM View

VENTILATION SLOTS

RECHARGEABLE BATTERY

SIDE View

DC5V IN - Connect to the power source.

USB - For use with USB flash drives.

VIDEO - Output video signal to an external monitor.

AUDIO - Output audio signal to an external receiver.

HEADPHONE - Connect to an earphone for a private listening.

 
 
VOLUME - Adjust volume level.

CONNECTIONS


USB/SD Card Connection

Insert USB/Card into the corresponding slot.

1. Press the DVD/USB/SD button to Display the source menu.

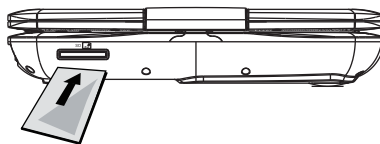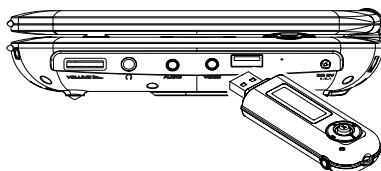

 2. Use the Up/Down direction buttons to select USB/SD, press OK to enter.

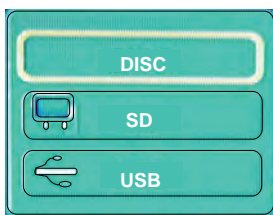

NOTE:

SD/USB is only displayed when there is an available device connected to the corresponding slot.

 
3. It takes a short while for the player's reading data. After USB/Card is recognized by the unit, screen will display a working menu, use direction buttons to select a desired file, press OK/Play/Pause to start playback.
4. To exit USB/SD, unplug it from the port, or use the DVD/USB/SD Button to switch to other modes.

Power Connections

- Connecting to the wall outlet

Caution:

- Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.
- Do not handle the power plug with wet hands. Doing so may cause electric shock.
- Only use AC Adapters of the type specified here. Failure to do so may cause a fire or damage the player.

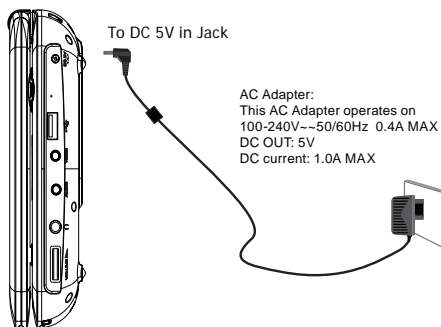


CONNECTIONS

Using the Built- in battery

The unit has a built-in rechargeable battery (lithium-polymer). Charge the built-in battery before using it for the first time. It takes about 4 hours to fully charge the battery.

 This battery can work for 2 hours after fully charged

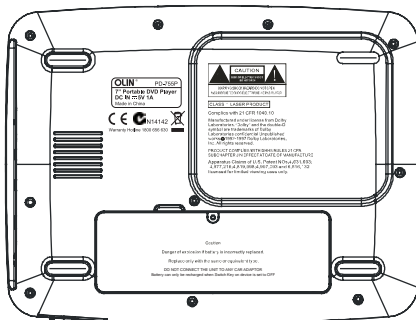

- Make sure that the power switch is set to the Off position before charging.
- To charge the built-in battery, just connect the AC adapter to the player and a specified wall outlet. See above. (The Battery Charge indicator will light red while it is charging; it will turn green when the battery is fully charged.)
- When the built-in battery power is low, the low battery icon will flash on the upper right corner of the screen for a while, and then the player will turn itself off automatically.

Note:

 
- Use the specified charger.
- Never dispose of in fire or heat up.
- Do not use in high temperature or near heat sources.
- Do not open the cover.
- Refer servicing only to qualified service personnel.
- To get the longest service life of the built-in battery, charge at indoor-temperature.

Earphone Connection

Be sure that your unit is at low volume level before connecting the earphones. Increase the volume gradually for your comfortable listening.

CAUTION:

Hearing experts advise against the constant use of personal stereos played at high volume. Constant high volume use can lead to hearing loss. If you experience ringing in the ears or hearing loss, discontinue use and seek medical advice.

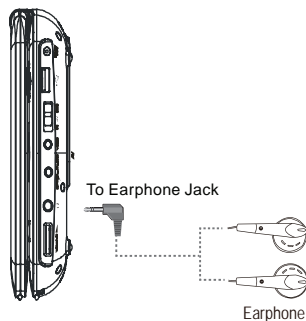


BASIC OPERATION

Power Supply

This unit should be used with 100-240V 50/60Hz AC wall outlets, only. See Power Connections section.

Basic Playback

 1. Prepare connections and power supply.
2. Load a disc.
Press the Open button to open the disc compartment lid. Load a disc with the label-side facing up. Close the lid manually. If a single-sided disc is loaded upside-down, the player will display "BAD DISC".
3. Start playback.
Press Play/Pause/OK to start playback (some discs may start playing automatically).

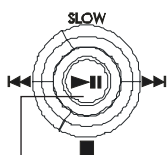


- Play/Pause -
Press this function control to start/hold disc playback.
- Skip -
Briefly push it to the left/right to locate a previous/next playback point.
- Search -
Hold it to the left/right for a short while to search fast backward/forward through playback contents.
- Slow -
Repeatedly push it up to start slow motion playback with a chosen speed. To resume a normal playback, press down this function control.
- Stop -
Briefly push it down to stop disc playback. You may get a pre-stop mode for the first time you push it down, do it the second time to stop playback completely.

Function Control is located on the right lower corner of the player's TFT panel.

Note:

Audio will be muted during fast-forward, fast-reverse, and slow-motion playback

 LCD Mode



Press this button to display the LCD mode menu. Use the up/down direction button to select an item in the menu, press the left/right direction to adjust parameter. When Flip/Mode/Reset is selected, press OK to adjust settings.

Power Saving

When the unit is left unused for a while, screen saver is automatically turned on, five minutes later, display will shut down for power-saving, you can press any button to wake it up.

BASIC OPERATIONS

Adjusting the Volume

- Turn the Volume Control dial to adjust the volume level up or down.

Disc Error Messages

The following messages will be displayed on-screen if there is a problem with the format of the loaded disc.

- **WRONG REGIONAL DISC.** The region code of the disc does not match the player's region code (Region 2).
- **WRONG PASSWORD.** The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.
- **BAD DISC.** The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop play completely, depending on how damaged the disc is.

Note:

DVD disc production quality may vary; some discs may deviate from the industry standard.

Some incorrectly-formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

Power Management

If the player will not be in use for a long period of time, set the Power Switch to the OFF position and unplug the player.

IR Menu

Press and hold the TITLE button to display the player's IR menu. Use direction buttons to select an item, press OK to confirm.



- A-B - Repeat a specified section on a disc.
Select this item, press OK once to set a starting point A, press OK twice to set an ending point B, the selected contents will be played repeatedly as a loop. Press A-B for the third time to resume a normal playback.
- Sub - Select an available subtitle.
- Audio - Select an alternate tracks.
- Zoom - Repeatedly press OK to get different zoom effects.
- Title - Display the available title menu.
- Search - Locate a desired section. Select this item, press OK to display a search menu, use direction buttons to enter data, press OK to confirm.
- Angle - Select an available camera angel.
- 1/All - Repeatedly press OK to set the repeat mode as charter/disc/all/off.
- Numbers - These buttons are usually used to input numeric data during menu setup.
The chosen number button functions only when you exit the IR Menu.

SETUP

Various features of the player can be adjusted in the SETUP menu.

1. Press **SETUP** to display the player's setup menu.
2. Press direction buttons to select and to adjust an option, press **OK** to confirm.
3. Press **SETUP** to exit.



Language Setup

Item	Description	Default Setting
OSD Language	Sets the language of the player's on-screen display.	English
Subtitle	Sets the default subtitle track of loaded DVDs	English
Audio	Sets the default language audio track of loaded DVDs.	English
DVD Menu	Sets the default subtitle track of loaded DVDs.	English

SETUP

Video

Item	Description	Default Setting
Aspect Ratio	Sets the aspect ratio of the display. 4:3 is used with standard television displays; 16:9 is used with widescreen television displays.	16:9
TV System	Sets the player's Video Out signal type. Set this to correspond with your TV's Video System type. PAL is the standard used in Australia.	Auto

Audio Setup

Item	Description	Default Setting
Channel Output	Sets the audio channel mix mode (LT/RT, Stereo).	Stereo

Rating

Item	Description	Default Setting
Parental Control	Sets the maturity rating level of the player. The player will not play any discs rated higher than this setting. This setting is password protected (the initial password is: 8888).	Levels 1 to 8. (8: ADULT is default)
Set Password	Change the Parental Ctrl password. Enter the old password, and then the new password. DO NOT FORGET THE PASSWORD; this password cannot be reset.	

Misc

Item	Description	Default Setting
Use Default Settings	Resets all settings to their factory default state. This will not reset the Parental Control password.	
Screen Saver	The screen saver prevents burn-in damage to the player's screen.	On
Disc Resume	To set the Disc Resume on/off	On

SPECIFICATIONS

Power supply	DC 5.0V 1 A
Power consumption	<= 5W
Signal system	AUTO/NTSC/PAL
SD Memory Cards	Capacitys 8G
USB Host	Capacitys 64G, USB 2.0 High-Speed
File System	FAT32
Video output	1±0.2V (p-p), 75ohm, Negative sync., 3.5 mm mini jack x1
Audio output	1.2 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1
Earphone terminal	3.5mm stereo mini jack x1
Signal /Noise ratio(audio)	90dB typical
Dynamic range(audio)	90dB typical
Panel size	7 inch (16:9)
Resolution	480(H) x 234 (V) (QVGA) Pixels
Laser	Wavelength 650 nm
Operating conditions	Temperature: 0℃ to 35℃. Operation status : Horizontal

TROUBLESHOOTING

There is no power to the device.

- Ensure that the Power Switch on the main unit is physically set to the ON position.
- Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.

The device will not play the disc.

- Ensure that a supported disc is loaded in the player label-side up.
- Ensure that the disc's rating level does not exceed the player's parental rating level.
- Ensure that the disc is not damaged or too dirty.
- Clean the disc or try another disc. Moisture may have condensed inside the player. Remove the disc and leave the player on for 1-2 hours and then try again.

There is no picture.

- Ensure that the TV set has been powered on and is set to the correct AV mode.
- Ensure that the connections between the player and the TV are secure and correct.
- Check if the connection cables are damaged.

The picture is noisy or distorted.

- The disc may be damaged or dirty. Clean the disc or try another one.
- Reset your TV's color system.
- Ensure that the player is connected directly to the TV (and not through a VCR, cable box, satellite receiver, etc.)

The picture is not full-screen.

- Change the aspect ratio setting of your player from the Setup menu.
- Select a different aspect ratio option from the DVD disc menu.

There is no sound or distorted sound.

- Ensure that the TV and amplifier have been turned on and properly set up.
- Ensure that the TV and amplifier connections are secure and correct.
- Try a different Audio track of the DVD by pressing AUDIO.
- Ensure that the MUTE function of the TV, Amplifier, or Player is not engaged.

The player has malfunctioned.

- Unplug the player. After 30 minutes, plug in and power on the player -- the restore function should reset the player.

Westwell Warranty Statement

1. Warranty against defects

Westwell Australia Pty Limited ACN106 648 202 ("Westwell") warrants the product to be free of any defects in materials and workmanship for a period of 12 months from the date of purchase ("Warranty"). However, the Warranty does not apply with respect of products damaged by unreasonable use or by use for which the product is not intended.

The Warranty will not cover defects resulting from alteration, accident, misuse, abuse or neglect and the Warranty is otherwise subject to the terms, conditions and stipulations recorded below.

2. Warranty is in addition to your rights under the law

The product Westwell supplies come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the products repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits accorded to you under this guarantee are in addition to your other rights and remedies any other law in relation to goods or services to which the Warranty relates.

3. What you must do for Westwell to be entitled to claim under the warranty

To make a claim under the Warranty you must:

- (a) return the product which you claim is defective to the Seller who supplied our products to you ("Seller").

The product must be unmarked and complete with instruction books and accessories (such as remote controls, power cords, battery chargers and connectivity cables) supplied at the time of purchase;

- (b) complete a claims form that we have supplied to the Seller for that purpose; and
- (c) provide a copy of a proof of purchase to the Seller to whom you are returning the products. The best proof of purchase is a tax invoice or receipt. Please discuss any other acceptable proofs of purchase with the Seller.

4. How Westwell will honour the warranty

If you comply with paragraph 3 above, and Westwell or the Seller determine that the product does not comply with the Warranty then, the Seller may at its discretion, promptly:

- (a) pay to you the cost of repairing or replacing the products or any part of the products; or
- (b) replace or repair the product.
- (c) Except as to terms, conditions, warranties or guarantees prescribed by law and from which Westwell cannot limit its liability ("prescribed term"):

- (1) the liability of Westwell and any Seller in respect of a breach of a prescribed term or the Warranty relating to the products or any part of the products is limited to the options set out in this paragraph 4 above;

- (2) in these conditions you do not have under any circumstances any cause of action against or right to claim or recover from the seller for, or in respect of, any loss or damage of any kind whatsoever, caused directly or indirectly by:

- (a) any defect in material or workmanship of, or any other defect whatsoever in, or unsuitability for, any purpose of the products or any part of the products; or
- (b) by default or negligence on the part of Westwell or of any employee, contractor or agent of the seller or of any person for whom the seller has legal responsibility relating to the supply of, or otherwise concerning products or any part of the products.

PLEASE note that Westwell will honour all consumer guarantees under the Australian Consumer Law to the extent it is required to do so by that legislation

5. Expense of making warranty claim

Subject to your rights under the Australian Consumer Law, if Westwell determines that the product you have returned does not breach the Warranty and Westwell does not have a legal obligation to provide you with a remedy in respect of the returned product (including for breach of a guarantee under the Australian Consumer Law), then:

- (a) Westwell reserves the right to claim all expenses and costs incurred by Westwell in processing the claim and returning the products; and
- (b) Westwell will have the right to make a claim against you for any monies that have been paid to you on account of your claim of breach of the Warranty, and by returning making the claim for breach of Warranty you agree to this proviso.

Westwell Warranty Statement

Subject to your rights under the Australian Consumer Law, where Westwell determines that your claim under the Warranty is correct and there has been a breach of the Warranty, then Westwell will determine if it is reasonable to reimburse your reasonable expenses in making the claim under the Warranty. It will be for Westwell to determine what is a reasonable expense and you will be required to substantiate that expense by documentation acceptable to Westwell.

(C) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

6. Customer Service - Who we are and how you may contact us

The company which gives the Warranty is Westwell Australia Pty Ltd ACN106 648 202.

For any Warranty query you can contact Westwell at:

(a) Customer Helpline: 1800 656 630

(b) Website: www.olinlivenow.com.au

(c) E-mail: support@westwell.com.au

Address: Westwell Australia, Suite 1802, Central Square, 323 Castlereagh Street, Sydney NSW 2000

Copyright

This manual contains information protected by copyright law.

No part of this document may be used or reproduced in any form or by any means, or stored in a database/retrieval system without prior written permission from us.

The information of this manual is based on the current version of the product.

We reserve the right to alter the content without prior notice.

All brand names in this manual are the property of their respective owners.